



Meets NHBC Requirements



Screw design reduces squeaks

Scan the QR code for full product information





More features & benefits



Plasterboard can be preinstalled



Guide to support installation




Reduces plasterboard cracking & fixing defects



Requires no pre-drilling

How to use

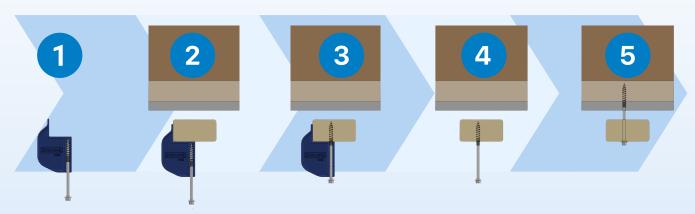

Insert the screw into the guide

Position the guide against the partition header

Partially drive the screw vertically into the header

Remove the guide

Drive the screw up (do not overdrive the screw)

*Install HRS at 1200mm maximum centres and ensure a minimum of 2 HRS's per partition, recommended edge distance of 200mm

Scan the QR code to refer to the 2025 **NHBC Standards** 6.3.9.3 & 6.4.9



touch:



Get in orders@itwcp.com +44(0)1592771132

C€ LK







